


# tonerplastics

## PlastiClay Instructions

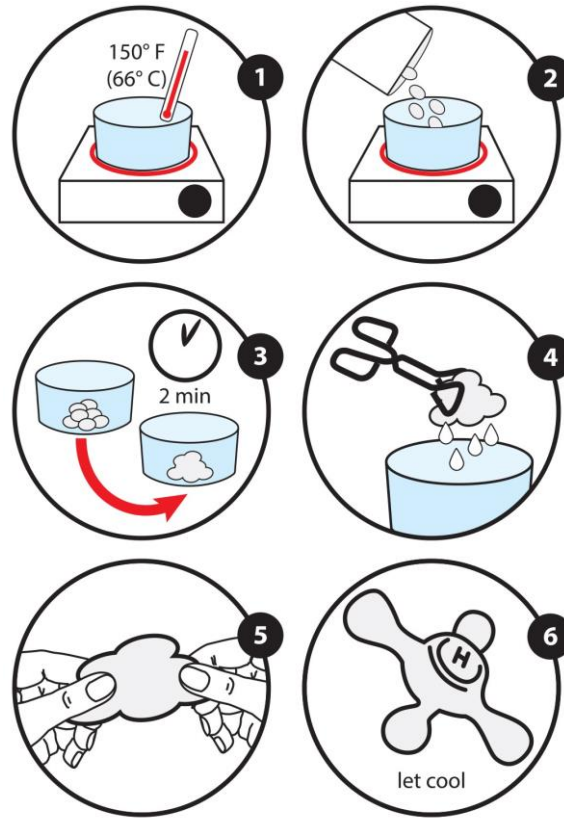

1. Heat water in a bowl to at least 150°F.
2. Pour PlastiClay pellets into the water.
3. Keep the pellets in the hot water until they turn clear and start to stick together (approximately 2 minutes).
4. Use tongs to remove the pellets from the water. Do not use your hands as the pellets will still be very hot.
5. Form the PlastiClay into the desired shape. You can use a variety of other tools as well as your hands.
6. Once you have finished molding the plastic into the desired shape, let it cool at room temperature. To speed up the cooling process, place the project in a bowl of ice water.